


Top Studio

1/12 FW14B SUPER DETAIL-UP SET 2

Front Dampers and Chassis Front Bulkhead

www.topstudiohobby.com TD23227

樹脂部件 Resin Parts

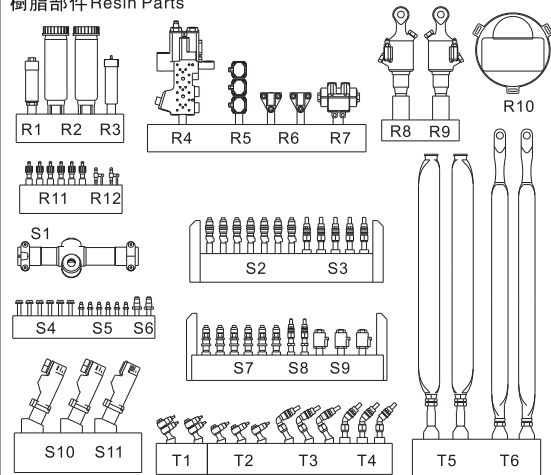

金屬部件 Metal Parts




M1		× 2
M2	TD23134	× 10
M3	TD23133	× 1
M4	TD23103	× 3
M5	TD23017	× 7
M6		× 1
M7		× 1
M8		× 2
M9	TD23237	× 2
M10	TD23239	× 2
M11		× 1

配線 Wire


1	0.3mm 黑色電線 0.3mm Black wire	×1
2	透明熱縮管 Clear shrink tube	×1
3	黑色熱縮管 Black shrink tube	×2
4	1.0mm 編織線 1.0mm braided line (sivory)	×1
5	1.0mm 編織線 1.0mm braided line (blue)	×1
6	1.0mm 銅管 1.0mm brass pipe	×1

其他部件 Other parts:


蝕刻片 Photo-etched plate A,B×1	鑽孔 Drill a hole
水貼 Decal ×1	切除 Cut off
黑色膠貼 Black band ×1	

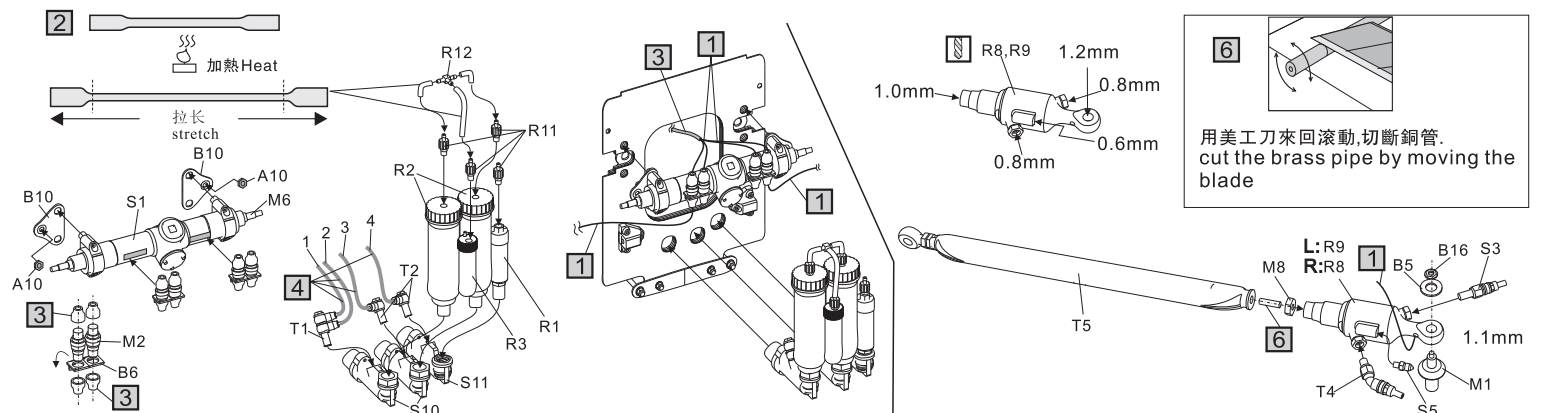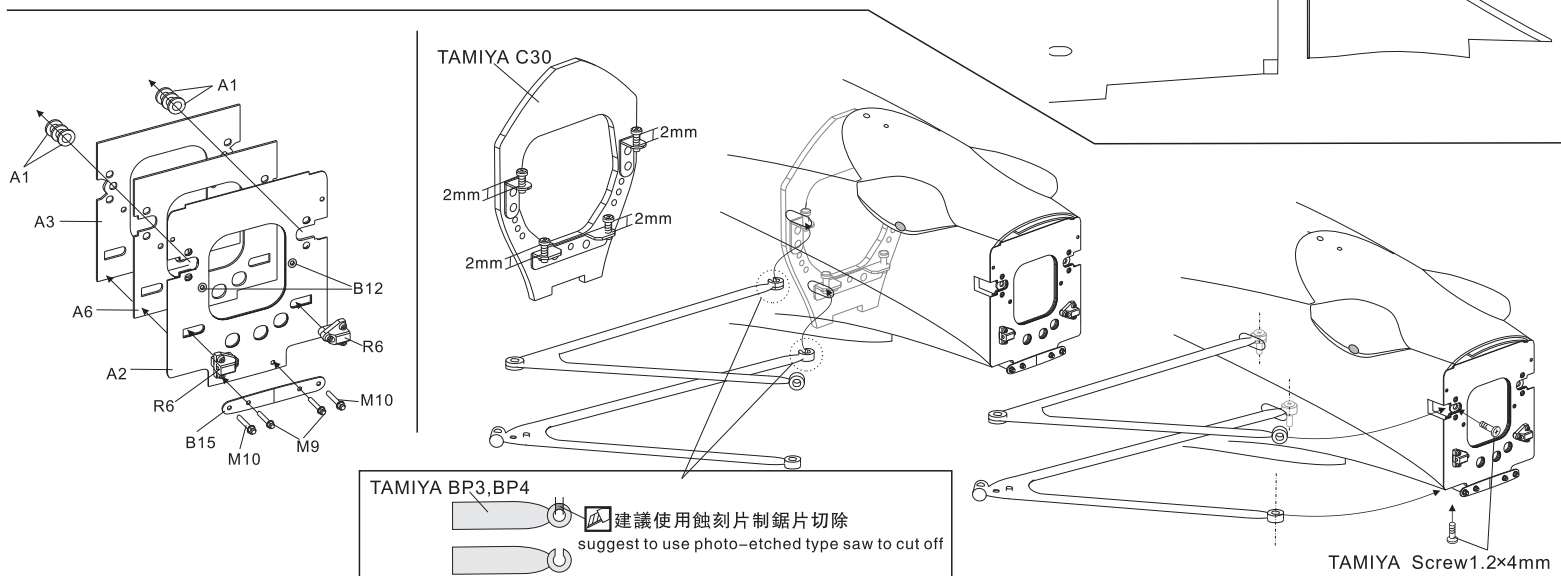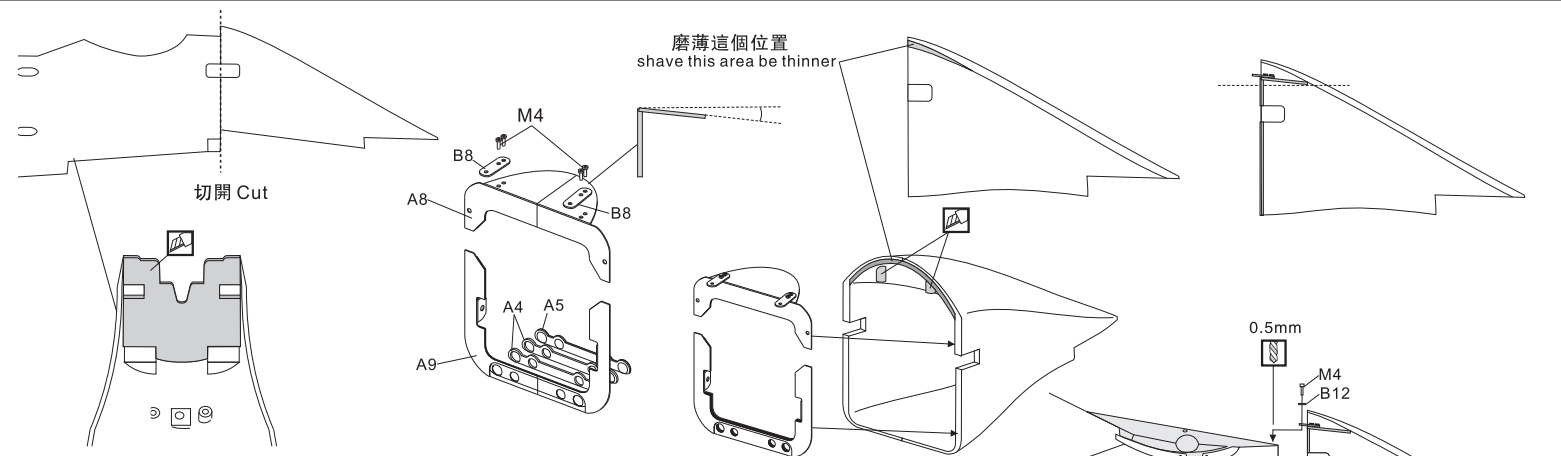


A




B

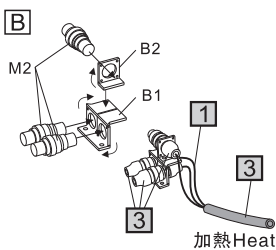


C

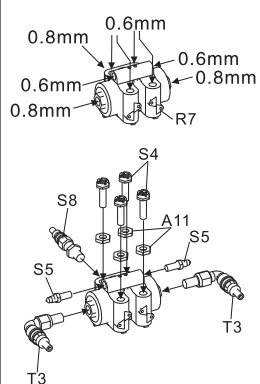


D

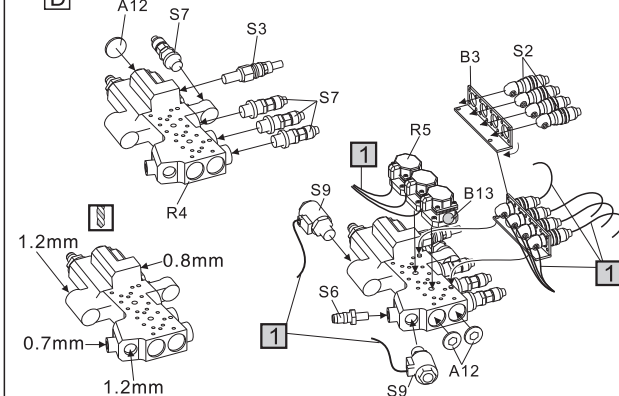

E

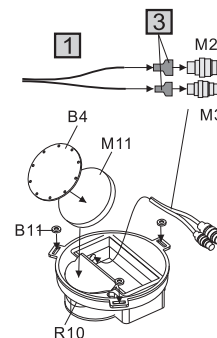


1:1

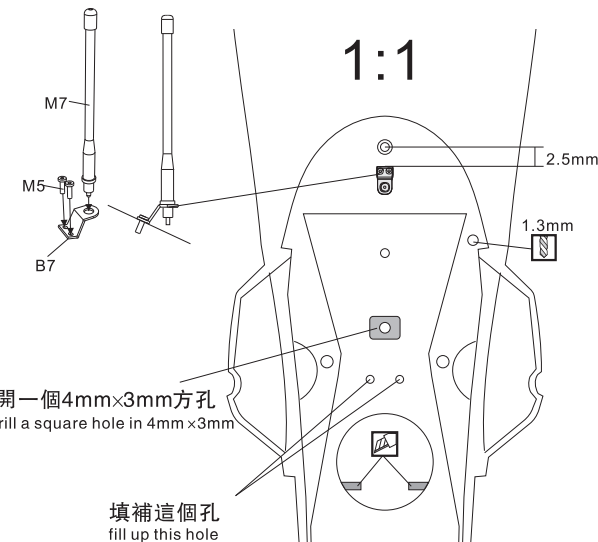


開一個4mm×3mm方孔
drill a square hole in 4mm×3mm

填補這個孔
fill up this hole

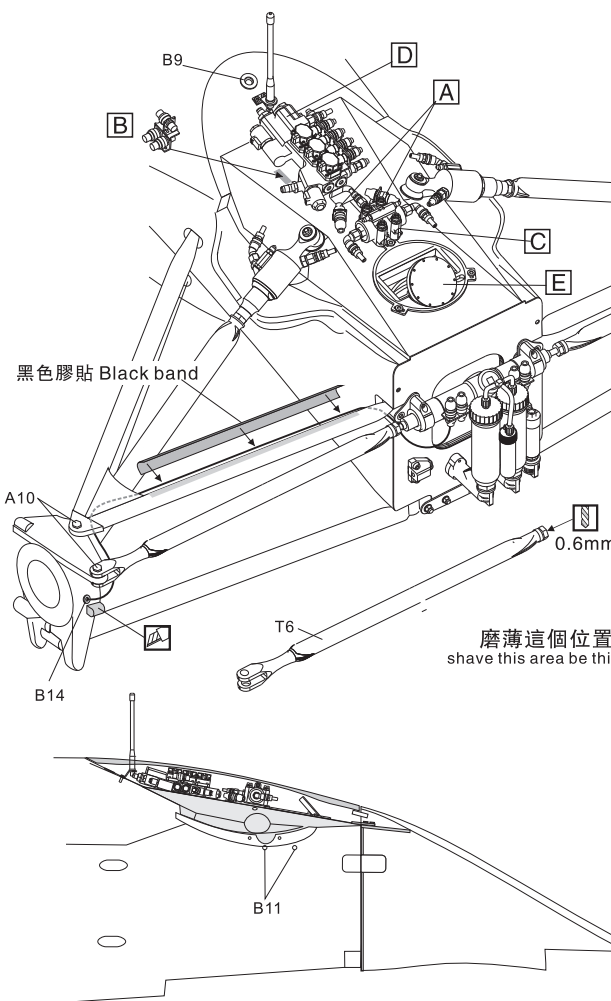


TAMIYA: F3

磨薄這個位置
shave this area be thinner

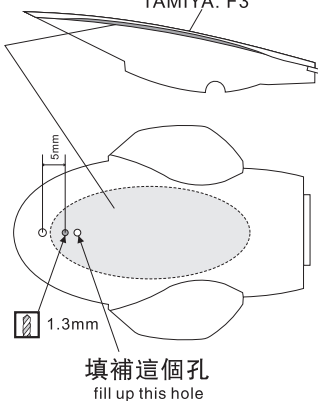


1:1

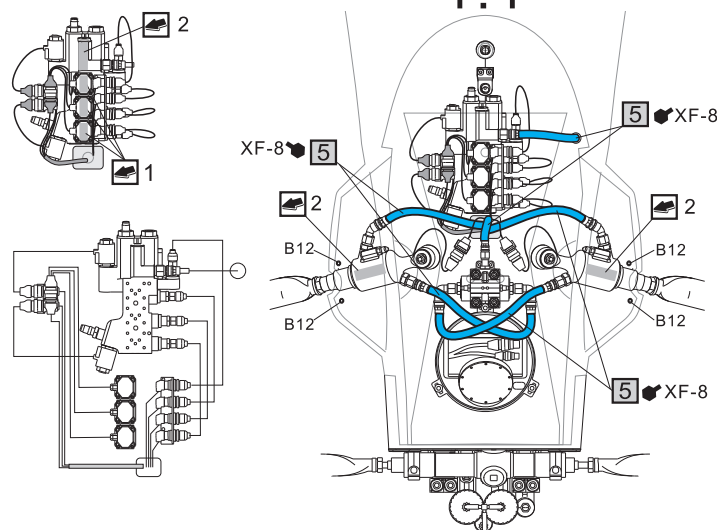

電子接頭 Electronic connectors




編織線 Braided Line

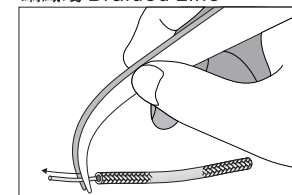


注意: 規格1.0,1.5mm的管芯內
有一根線芯, 使用前請用
鑷子取出。


Note: There is an inner line inside the
1.0, 1.5mm braided lines, use a sharp
tweezers to remove it.

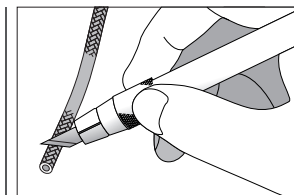

使用筆刀修剪多餘的毛邊。
Cut off the residue by a sharp hobby
knife.

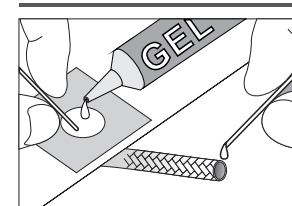

使用少量慢干型的啞喱膠塗在线口
防止线头散开。
Apply some CA glue (gel type and slow curing)
to the end of the braided line. This can
help to prevent the thin lines spreading
out.

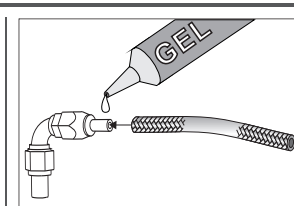

注意: 必須使用少量慢干型的啞喱
粘接。
Note: cement by using CA glue
(gel type and slow curing)